



Cable Innovations, Inc.  
130 Stanley Ct.  
Lawrenceville, GA 30045  
770-962-5146  
www.Cableinnovations.com

## INSTALLATION INSTRUCTION FOR PLS-125P

### Installation:

Plug in the PLS-125P to the electrical outlet inside the power supply housing as shown in (Figure 1).

### What does the indicator tell me?

LED ON: Indicates power to the outlet and the PLS-125P is working ok

LED OFF: Indicates no power to the outlet or the surge circuitry may have failed.

### How can I tell if the PLS-125P is working?

The rated varistor voltage of an MOV can be tested with a variable voltage DC source ammeter and DC voltmeter across the device. Measure the voltage at 1.0mA and compare to the rated varistor voltage of the unit. Please contact Cable Innovations for a more detailed procedure for this test.

FIGURE 1

